



MANIFOLD MOUNT SEQUENCE VALVE

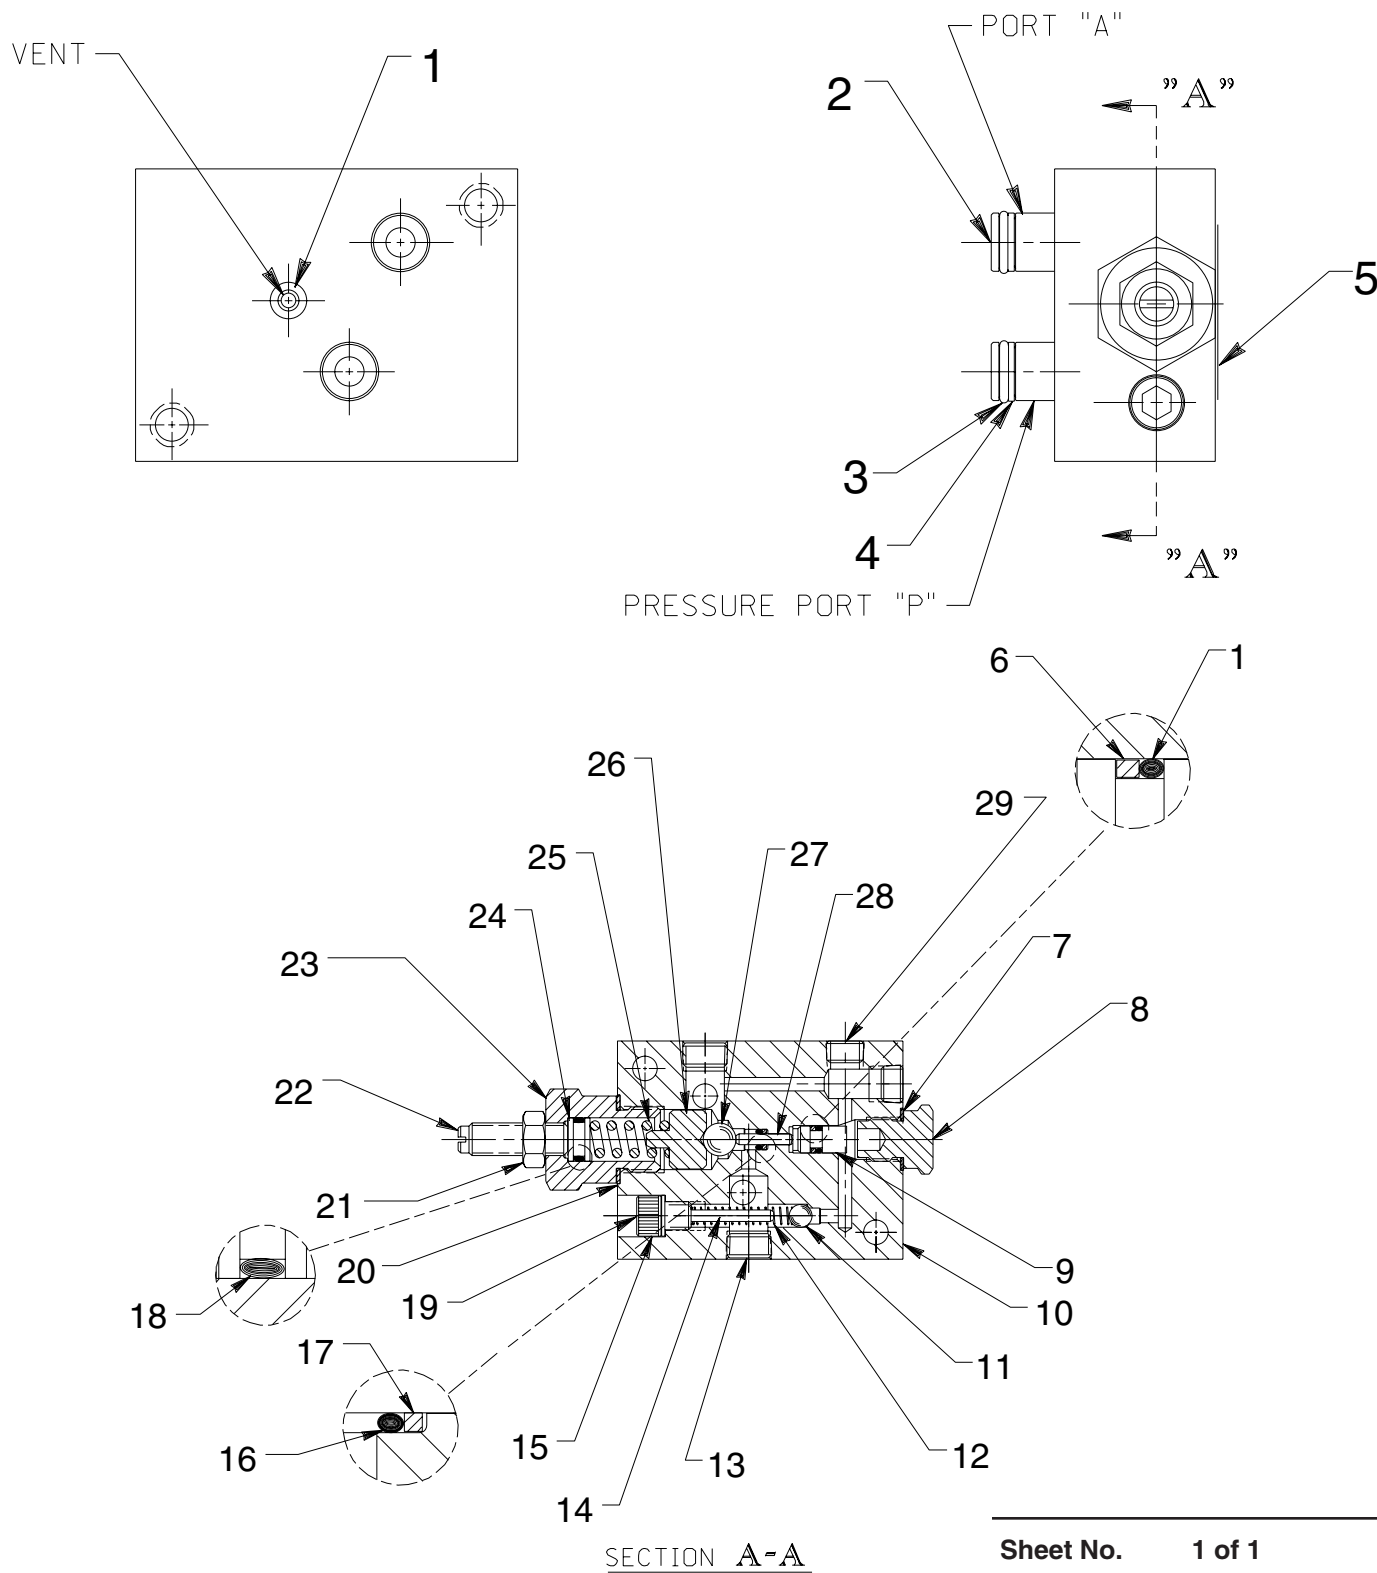

Item No.	Part No.	No. Req'd	Description	Item No.	Part No.	No. Req'd	Description
1	10265	2	O-ring (5/16 x 3/16 x 1/16, -008)	15	11031	1	Copper Washer
2	21094	2	Bushing	16	10264	1	O-ring (1/4 x 1/8 x 1/16, -006)
3	10268	4	O-ring (1/2 x 3/8 x 1/16, -012)	17	15084	1	Backup Washer (-006)
4	11863	4	Backup Washer (-012)	18	13943	1	O-ring (1/2 x 3/8 x 1/16, -012)
5	216464	1	Decal	19	25683	1	Special Cap Screw (5/16-18 UNC; Torque to 170/180 in. lbs.)
6	15174	1	Backup Washer (-008)	20	10263	1	Copper Washer
7	14874	1	Copper Washer	21	10386	1	Hex Nut (3/8-24 UNF)
8	305975	1	Valve Screw (Torque to 30/35 ft. lbs.)	22	22362	1	Valve Adjusting Screw
9	210283	1	Piston	23	21305	1	Valve Cap (Torque to 60/70 ft. lbs.)
10	62139	1	Valve Body	24	24629	1	Spring Button
11	10374	1	Metal Ball (7/32 dia.)	25	10428	1	Compression Spring
12	250227	1	Compression Spring	26	210285	1	Ball Guide
13	14972	2	Pipe Plug (1/4 NPTF)	27	10378	1	Metal Ball (3/8 dia.)
14	11566	1	Slotted Spring Pin (1/8 dia. x 1-1/4 Lg.) NOTE: Pin must be bottomed out in hole of screw.	28	17026	1	Dowel Pin (1/8 dia. x 5/8 Lg.)
				29	15499	2	Pipe Plug (1/8 NPTF)

INSTALLATION INSTRUCTIONS

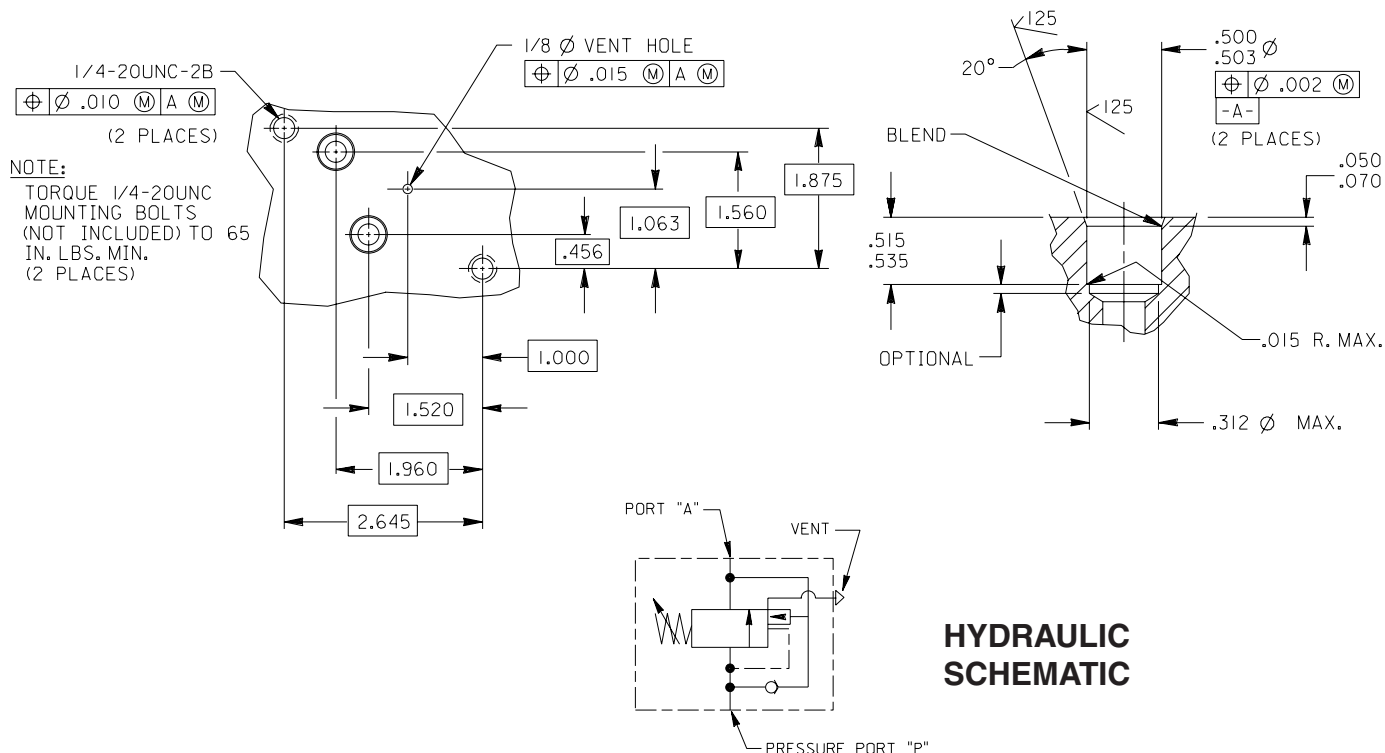

HYDRAULIC SCHEMATIC

Refer to any operating instructions included with the product for detailed information about operation, testing, assembly, disassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Hytec replacement parts!**

Additional questions can be directed to our Technical Services Departments.