



For **MODEL B** PE8, PE17 & PE46 Series pumps, 220 V.
with single phase induction motors and manifolds or manual valves:

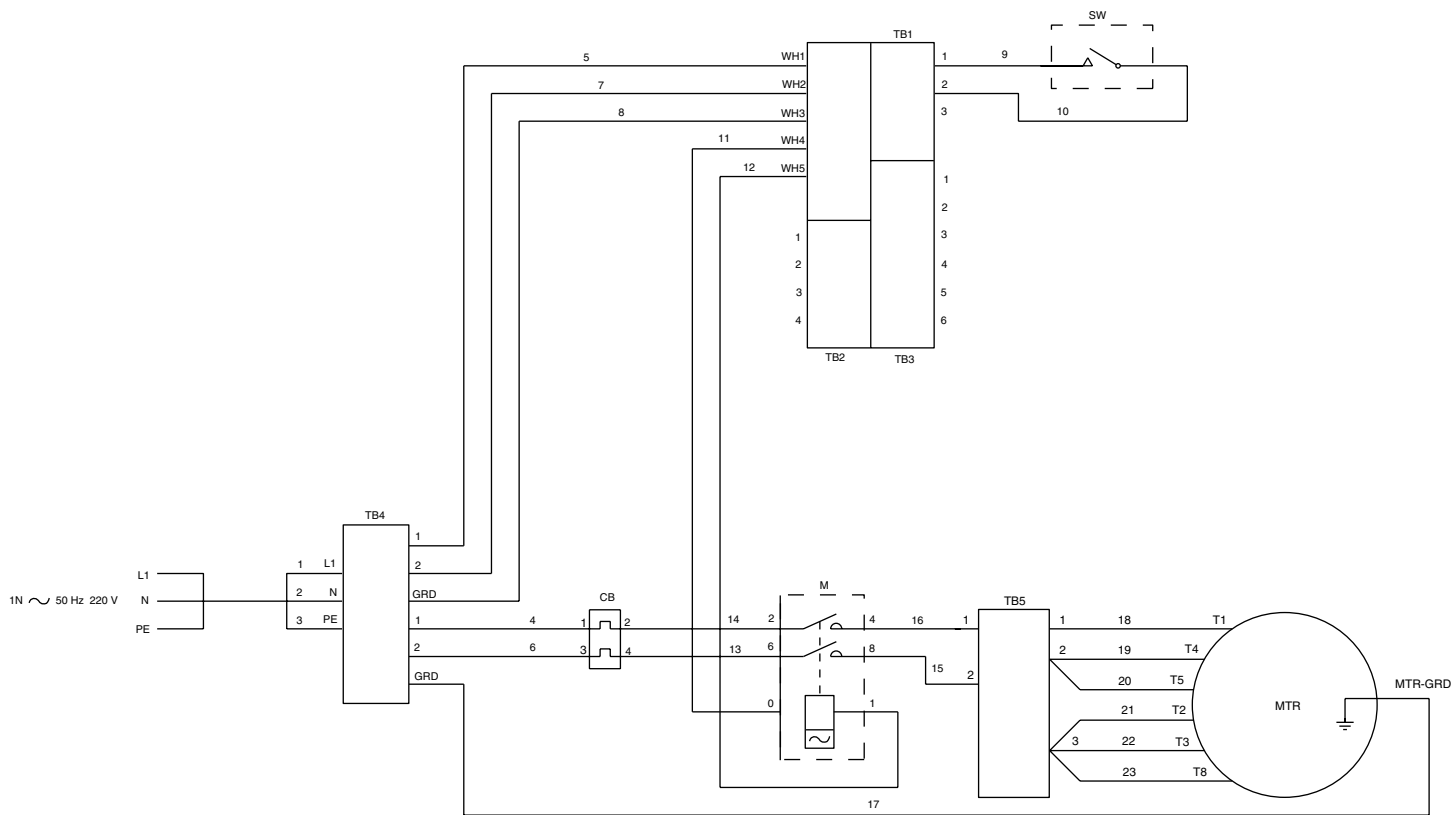


Note: This schematic changed at last revision(s) made to this form.

**For MODEL A PE8, PE17 & PE46 Series pumps, 110 V.
with single phase induction motors and manifolds or manual valves:**

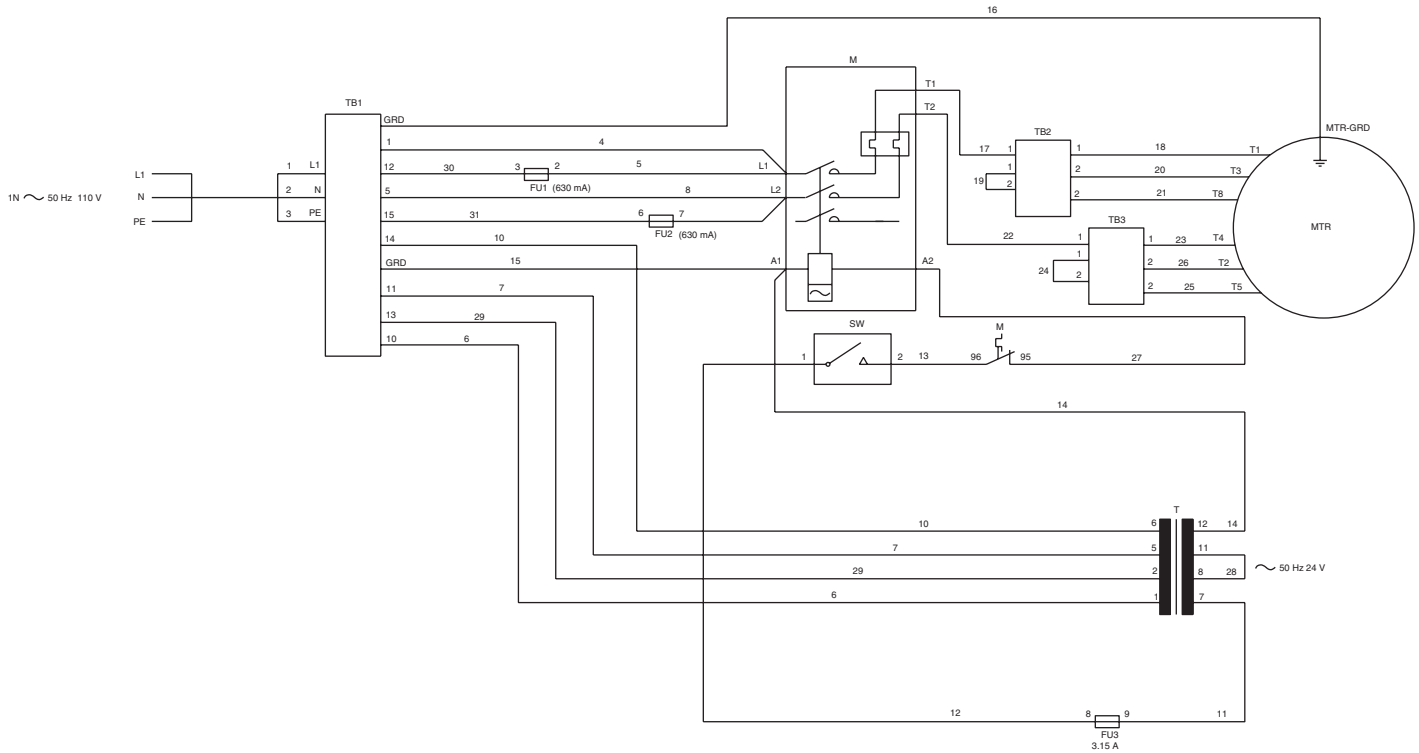


**For MODEL B PE8, PE17 & PE46 Series pumps, 110 V.
with single phase induction motors and manifolds or manual valves:**

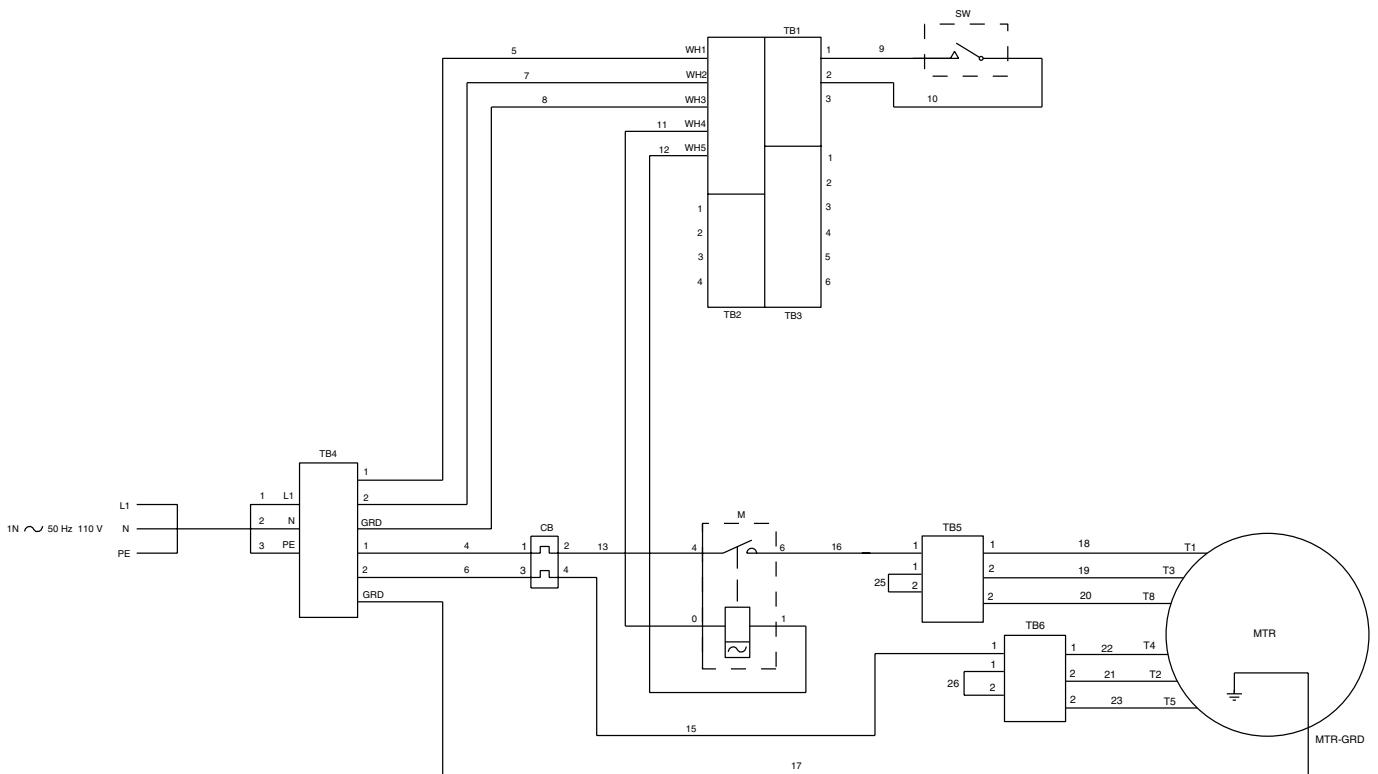

Note: This schematic changed at last revision(s) made to this form.


For MODEL A PE8, PE17 & PE46 Series pumps, 220 V.
with single phase induction motors and solenoid (1 coil) controlled valves:

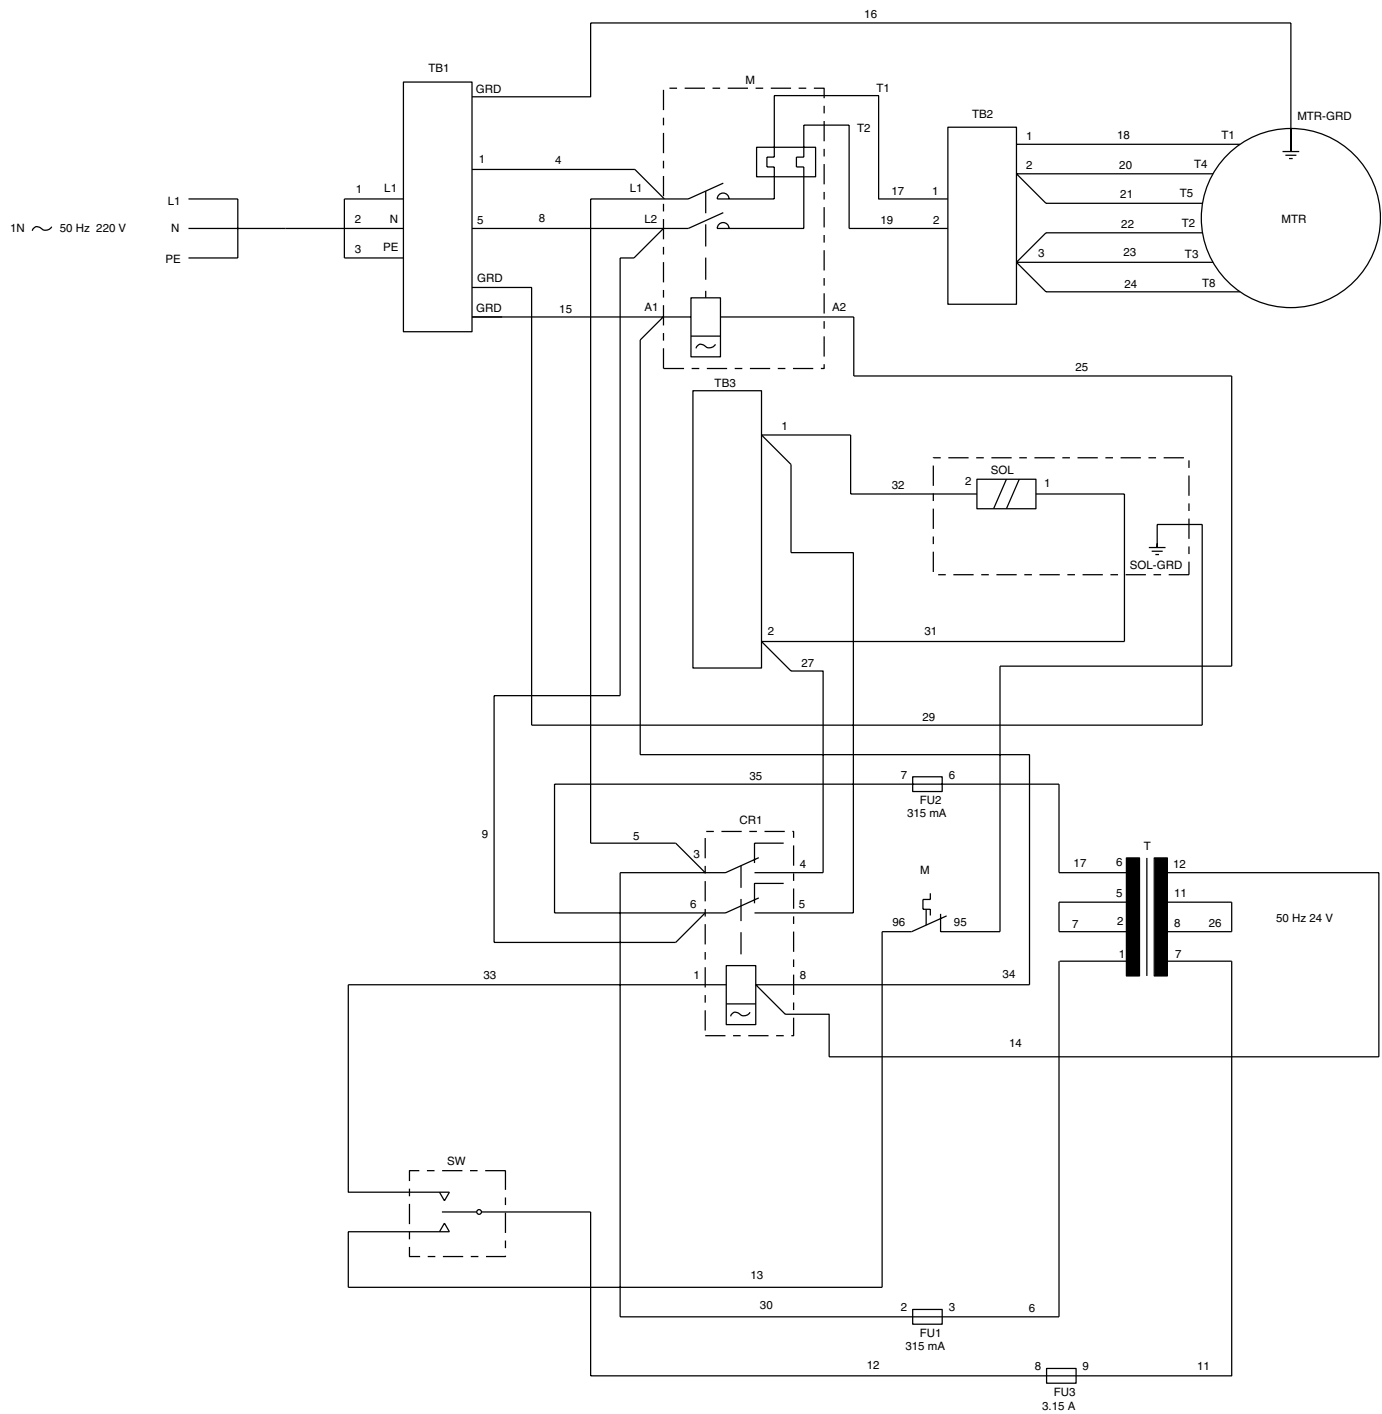


[illegible]

Rev. 1 Date: 9 Jan. 2001

For MODEL A PE8, PE17 & PE46 Series pumps, 110 V.
with single phase induction motors and solenoid (1 coil) controlled valves:

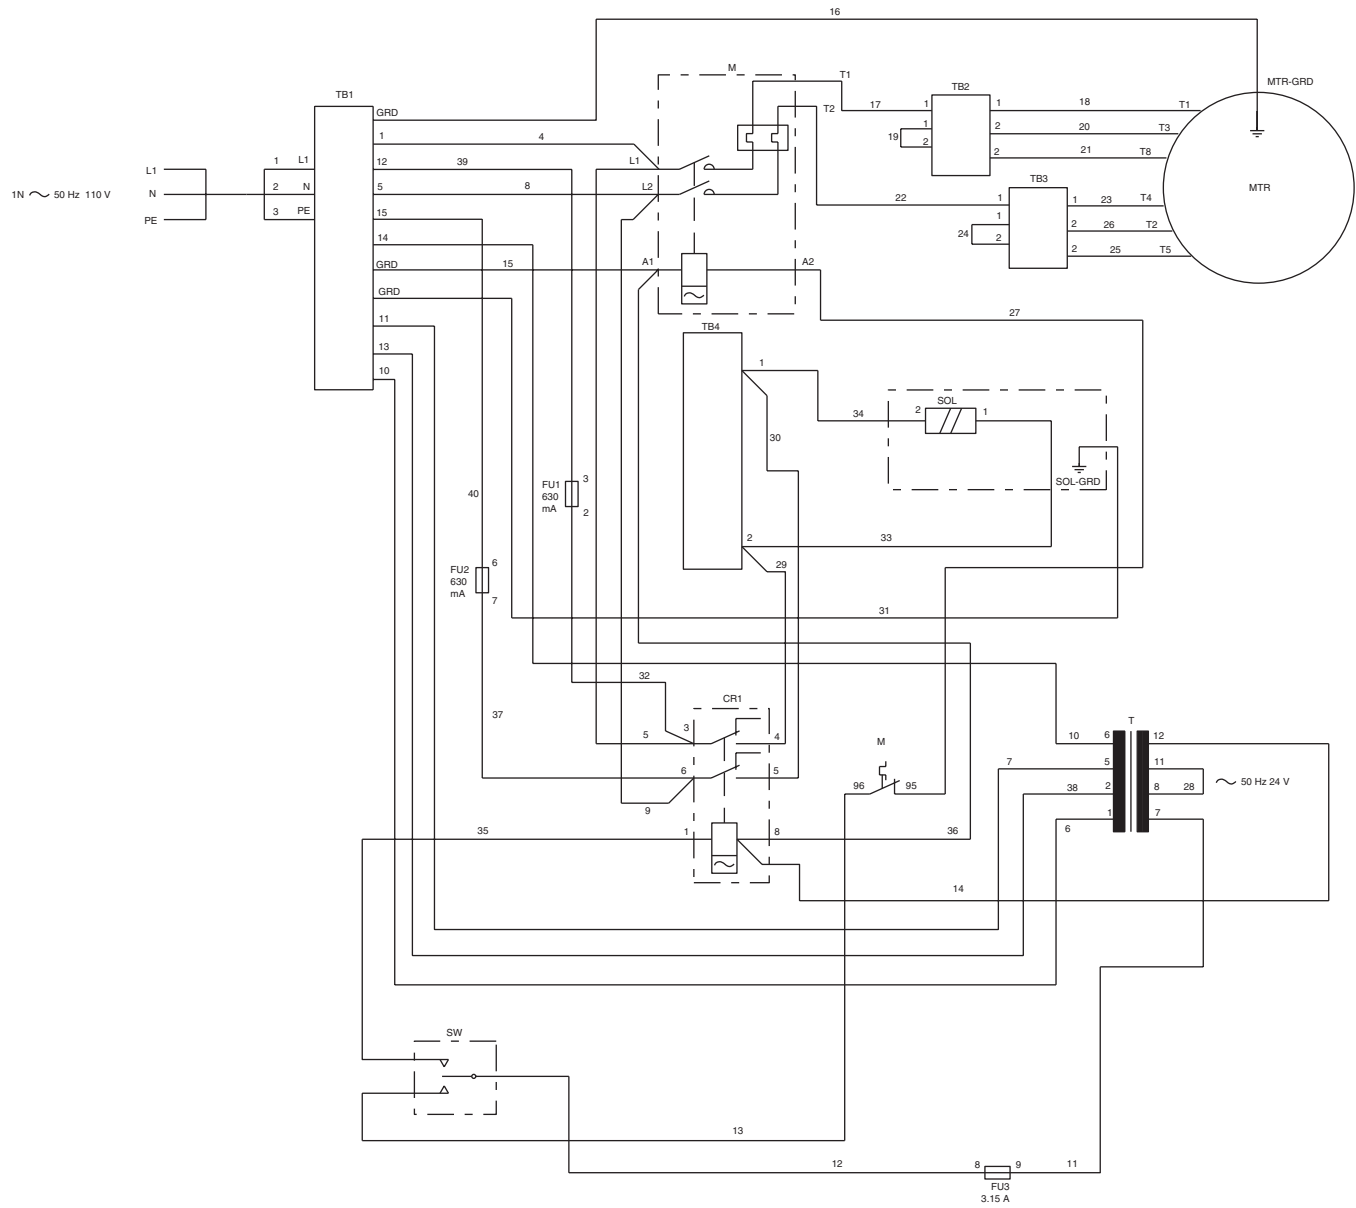


For **MODEL B** PE8, PE17 & PE46 Series pumps, 110 V.
with single phase induction motors and solenoid (1 coil) controlled valves:

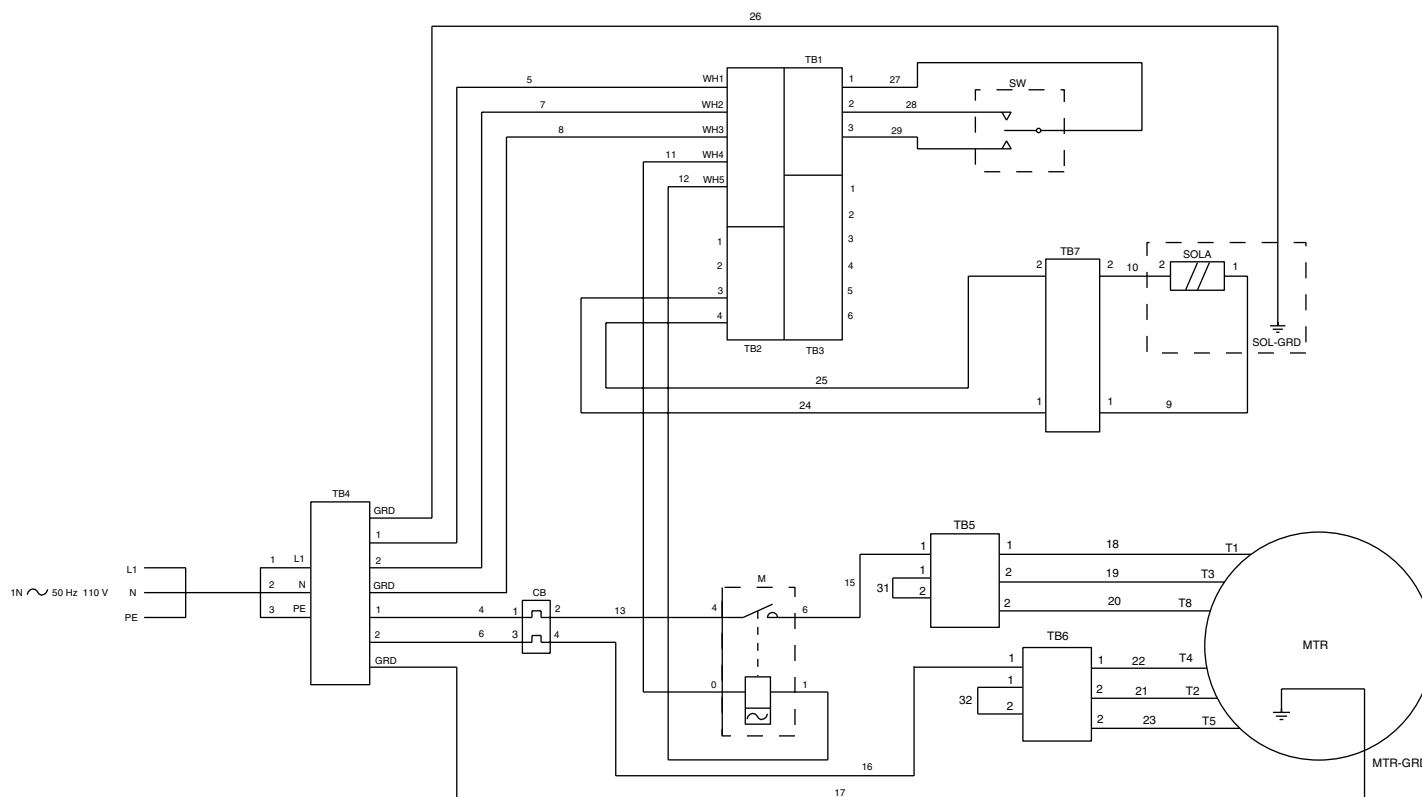


Note: This schematic changed at last revision(s) made to this form.

For **MODEL A** PE8, PE17 & PE46 Series pumps, 220 V.
with single phase induction motors and solenoid (2 coils) controlled valves:

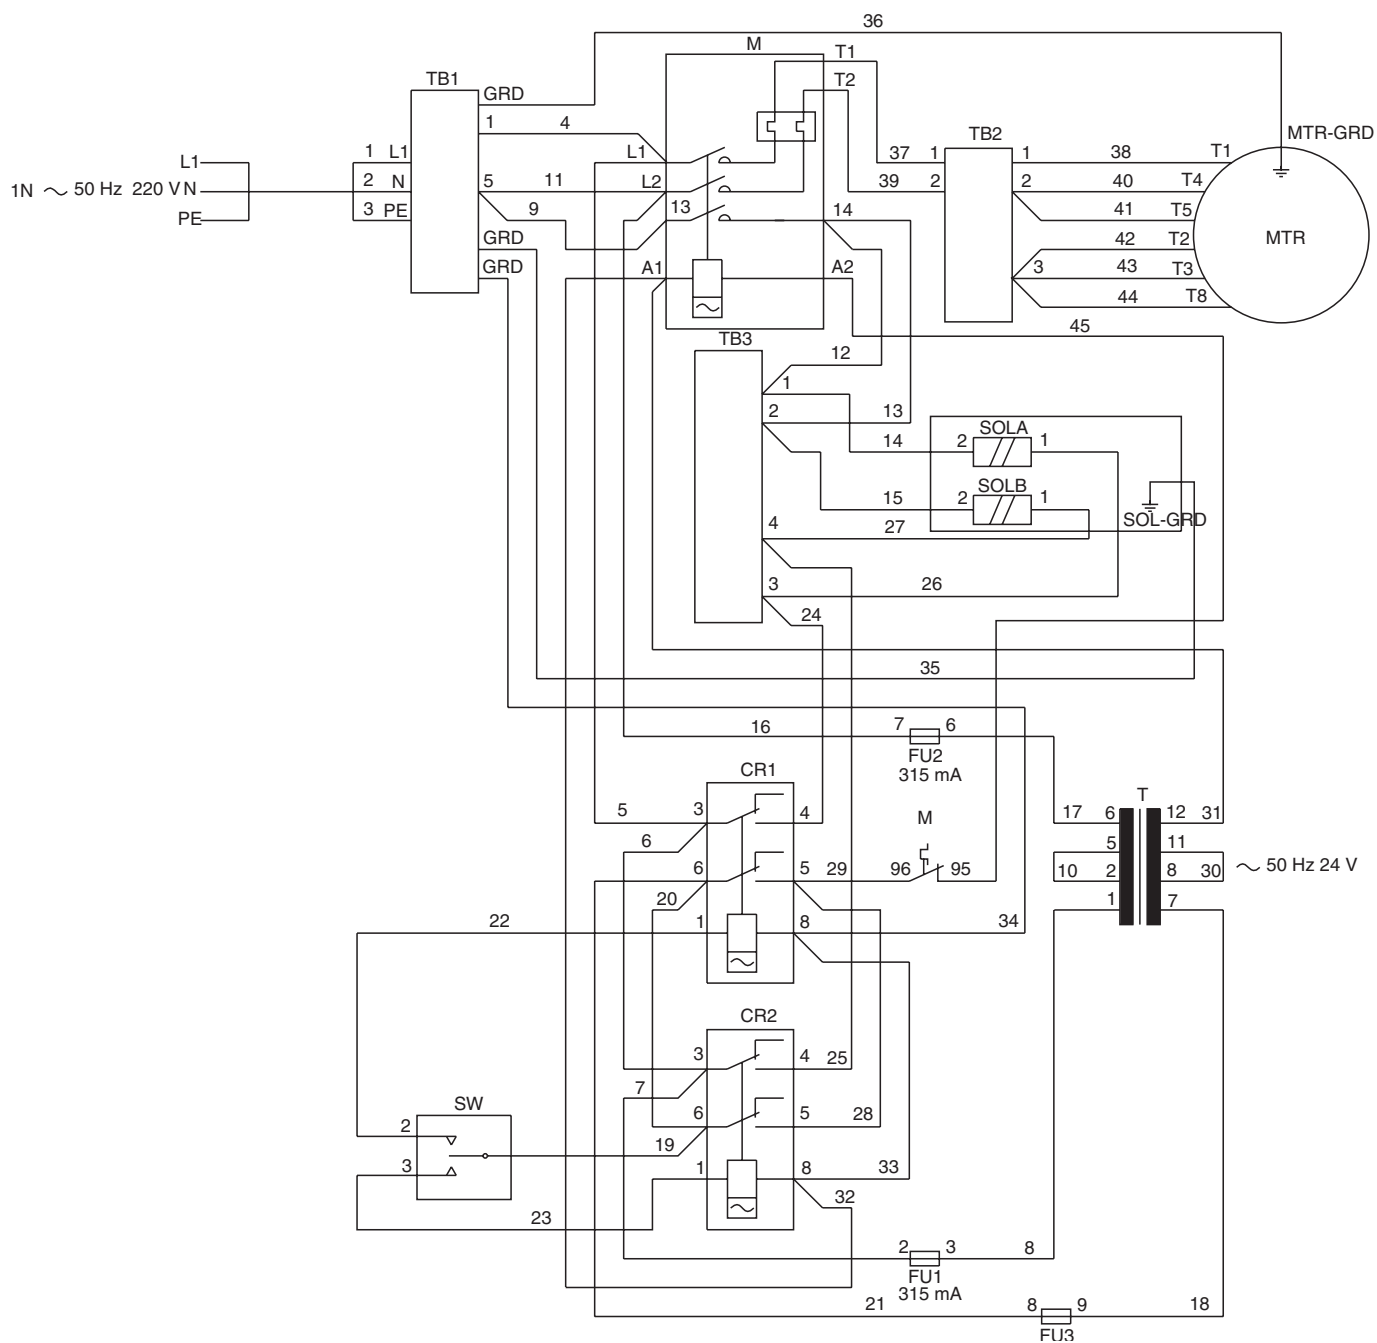

For **MODEL B** PE8, PE17 & PE46 Series pumps, 220 V.
with single phase induction motors and solenoid (2 coils) controlled valves:

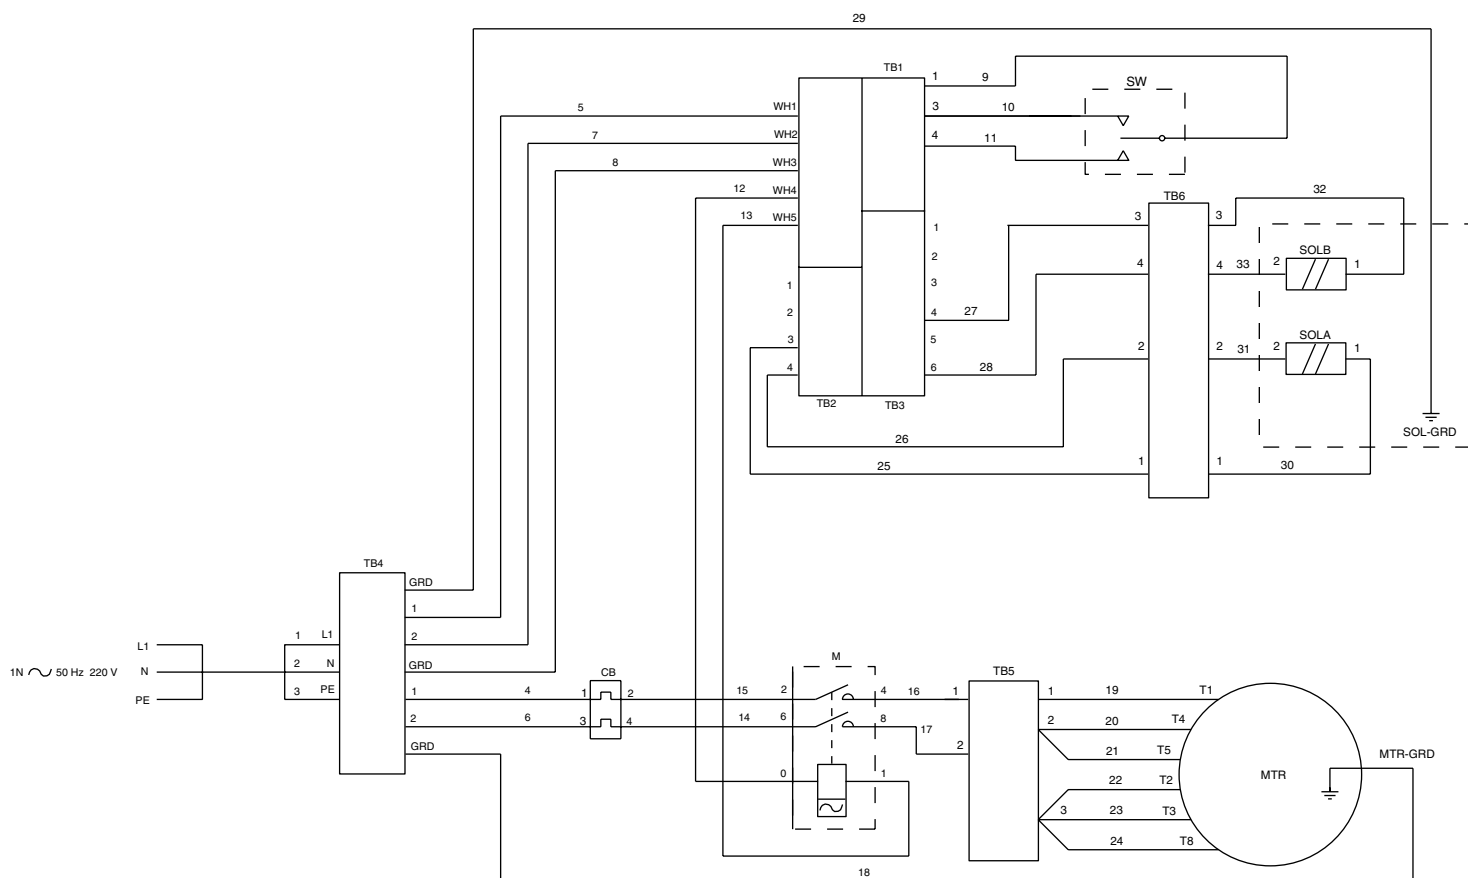

Note: This schematic changed at last revision(s) made to this form.

**For MODEL A PE8, PE17 & PE46 Series pumps
with single phase induction motors and solenoid controlled valves and pressure switch:**

