


MODEL C HYDRAULIC WORK SUPPORT Max. Capacity: 7,500 lbs. at 5,000 PSI

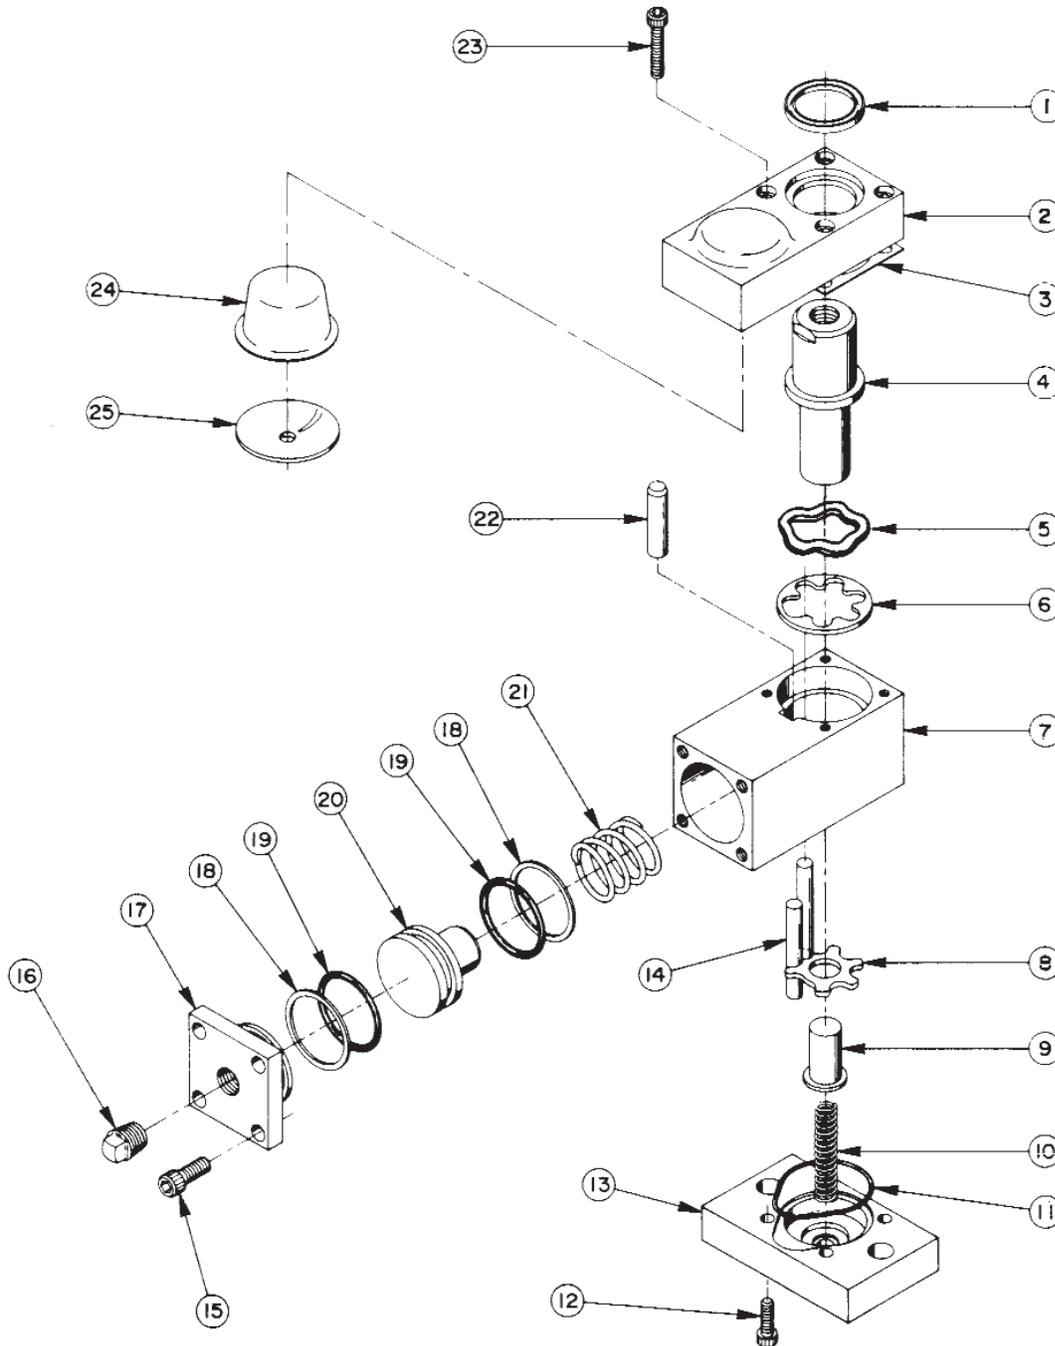

Parts List, Form No. 108101, Back sheet 1 of 1

Item No.	Part No.	No. Req'd	Description
1	*15087	1	Rod Wiper (Included in Cap Assembly [Item #2]) Note: Assemble with Loctite gasket eliminator #510 or equivalent.
2	250681	1	Cap Assembly (Includes Wiper [Item #1], Diaphragm [Item #24], and Expansion Plug [Item #25])
3	*307061	1	Gasket
4	36437	1	Center Shaft
5	250471	1	Spring Washer (1.460 O.D. x 1.320 I.D.)
6	201882	1	Upper Pin Retainer
7	42334	1	Body
8	201883	1	Lower Pin Retainer
9	201877	1	Plate Retainer
10	17796	1	Spring (3/8 O.D. x 3" Lg.; For 100226 & 100926)
	250273	1	Spring (3/8 O.D. x 1-7/8 Lg.; For 100226-CMI)
11	*14875	1	O-ring (1-5/8 x 1-1/2 x 1/16)
12	11152	4	Soc. Hd. Cap Screw (#10-24 UNC x 5/8 Lg.; Torque to 60/70 in. lbs.)
13	46654	1	Bottom Plate (For 100226 & 100926)
	420082	1	Bottom Plate (For 100226-CMI)
14	201881	1	Pin Set (NOTE: Must be replaced as a set - 12 pieces per set with max. total variance in length to be .001.)
15	10006	4	Soc. Hd. Cap Screw (1/4-20 UNC x 5/8 Lg.; Torque to 140/160 in. lbs.)
16	10970	1	Pipe Plug (1/4 NPTF; For 100226 & 100226-CMI)
	250883	1	Plug Fitting (7/16 SAE; For 100926)
17	253689	1	End Cap (For 100226 & 100226-CMI)
	360006	1	End Cap (For 100926)
18	*19177	2	Teflon Backup Washer (1-3/8 x 1-3/16 x 3/64 Thk.)
19	*10914	2	O-ring (1-3/8 x 1-3/16 x 2/32)
20	253681	1	Piston Plunger
21	253059	1	Compression Spring (1" O.D. x .67 Lg.)
22	214463	1	Dowel Pin (Special)
23	14426	4	Soc. Hd. Cap Screw (#10-24 UNC x 1" Lg.; Torque to 60/70 in. lbs.)
24	-----	1	Rubber Diaphragm (Not a serviceable part; available only with Cap Assembly [Item #2])
25	-----	1	Expansion Plug (Not a serviceable part; available only with Cap Assembly [Item #2])

PARTS INCLUDED BUT NOT SHOWN

253693	2	Trade Name & Capacity Decal (For 100226)
250247	2	Trade Name & Capacity Decal (For 100926)
250259	2	Trade Name Decal (For 100226-CMI)

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300641.

Refer to any operating instructions included with this product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Hytec replacement parts!**

Additional questions can be directed to our Technical Services Department.

Note: Shaded areas reflect last revision(s) made to this form.