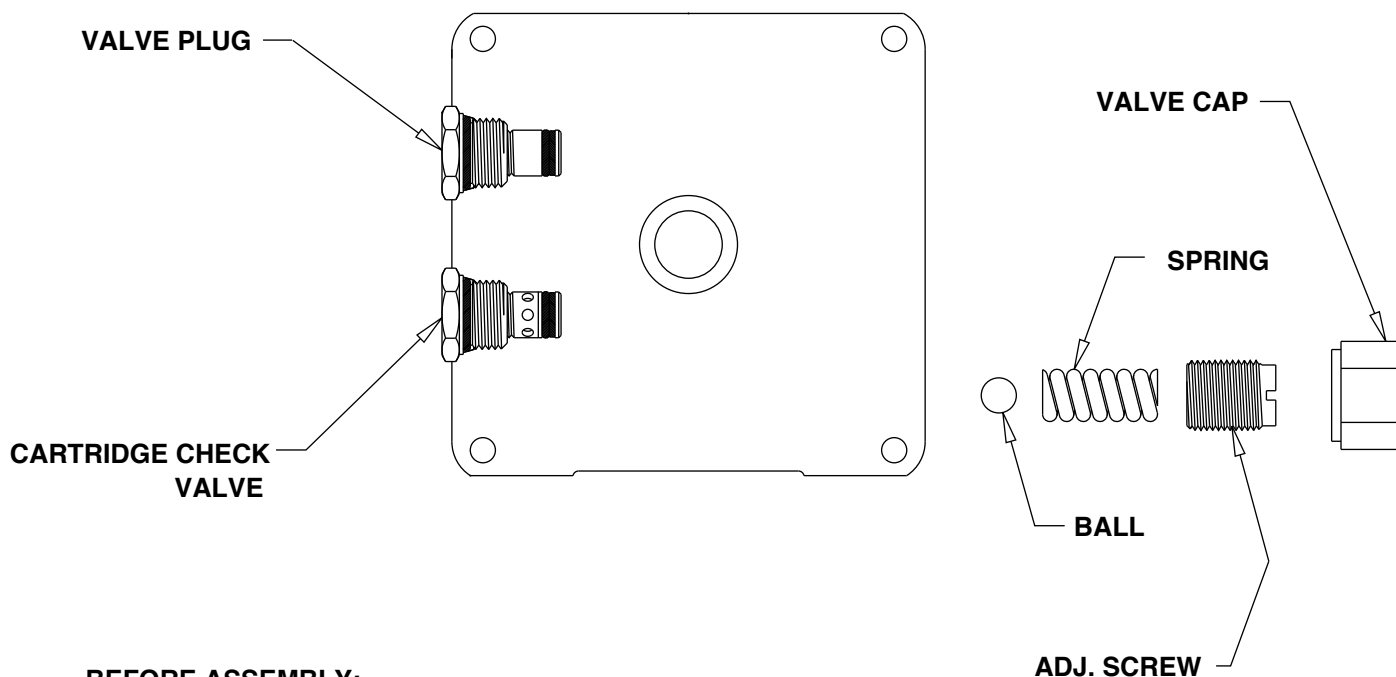


**INSTALLATION INSTRUCTIONS
FOR KC07****BEFORE ASSEMBLY:****1. CHECK THAT KIT CONTAINS THESE ITEMS:**

QTY	DESCRIPTION
1	CARTRIDGE CHECK VALVE
4	SPRING
1	VALVE CAP

QTY	DESCRIPTION
1	BALL
1	VALVE PLUG
1	ADJ. SCREW

2. INSPECT VALVE CAVITIES FOR CONTAMINATION. REMOVE DIRT AND DEBRIS.**ASSEMBLY INSTRUCTIONS:**

1. INSTALL CARTRIDGE CHECK AND VALVE PLUG BY HAND THEN TIGHTEN TO 10-15 FT LBS USING 7/8" WRENCH.
2. INSTALL BALL, SPRING, AND ADJUSTMENT SCREW AS SHOWN. SET RELIEF VALVE CAP TO ONE SIDE, TO BE INSTALLED AFTER THE RELIEF VALVE HAS BEEN SET.

RECOMMENDED NEXT STEP:

1. INSTALL DIRECTIONAL CONTROL VALVE, IF REQUIRED
OTHERWISE INSTALL PLUMBING.