


**INSTALLATION INSTRUCTIONS
FOR KMC_**

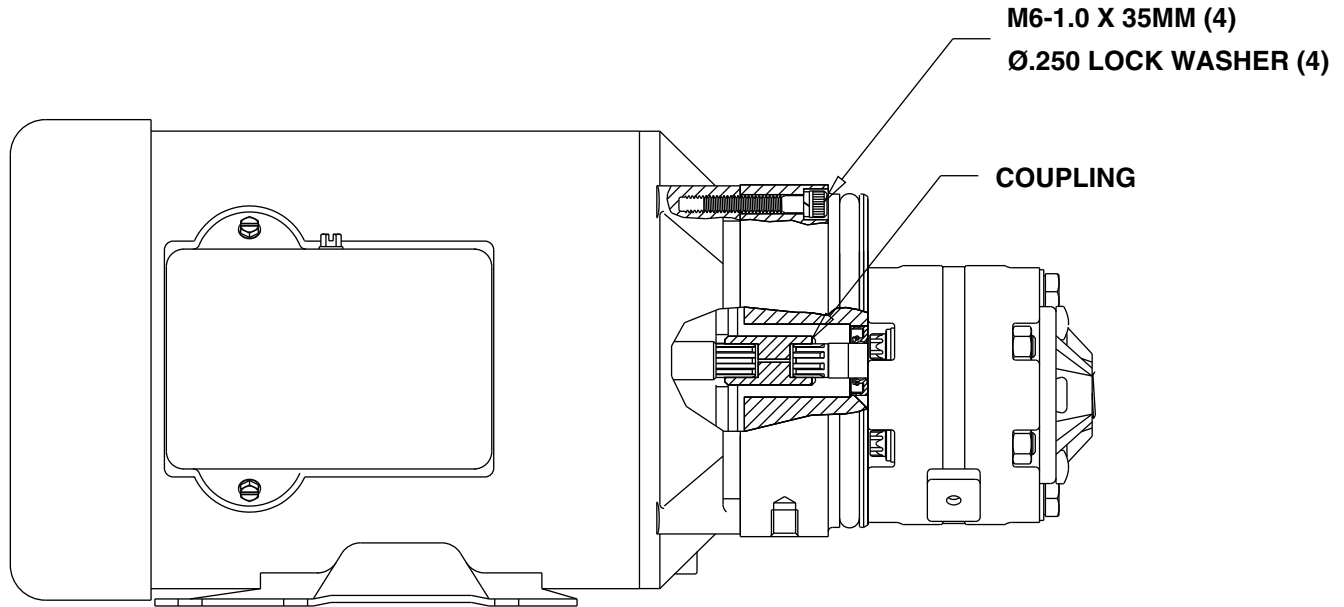

BEFORE ASSEMBLY:

1. CHECK THAT THE KIT CONTAINS A K-187 MOTOR ATTACHMENT KIT WHICH CONTAINS:

QTY	DESCRIPTION
4	M6-1.0 x 35MM SHC SCREW (P/N 3009-AA)
4	Ø.250 LOCK WASHER (P/N 3020-AA)
1	COUPLING (P/N 2001463)

2. CHECK THAT PUMP HAS BEEN CORRECTLY INSTALLED TO ENDHEAD.

ASSEMBLY INSTRUCTIONS:

1. INSTALL COUPLING TO MOTOR DRIVE SHAFT
2. INSTALL LOCK WASHERS ONTO M6-1.0 x 35MM SCREWS.
3. MOUNT END HEAD TO MOTOR USING M6-1 x 35MM SCREWS.
4. TORQUE M6-1.0 SCREWS TO 8-10 FT-LBS.

RECOMMENDED NEXT STEP:

1. INSTALL INTEGRAL VALVES.