

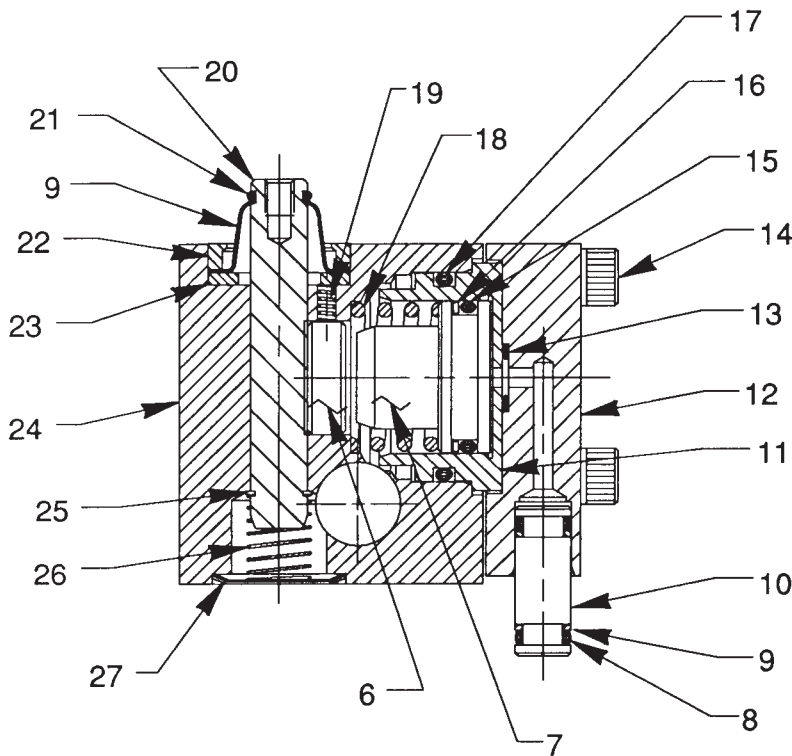


MANIFOLD MOUNT HYDRAULIC WORK SUPPORT

Max. Capacity: 1,100 lbs.

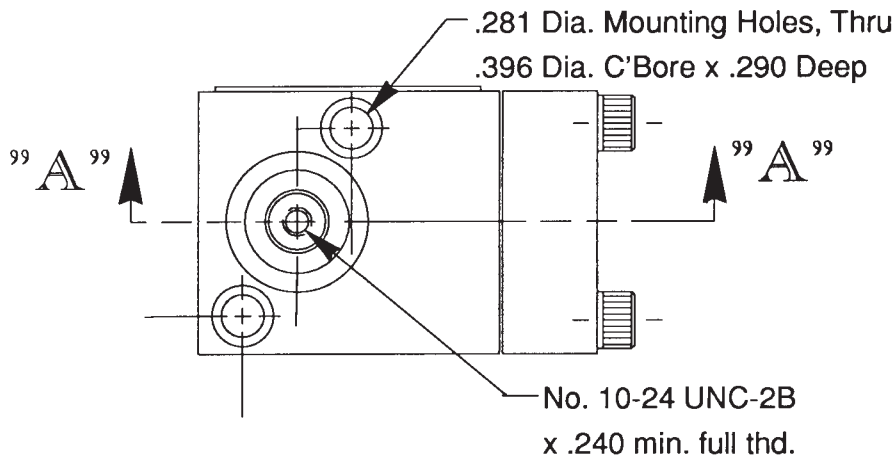

SECTION A-A

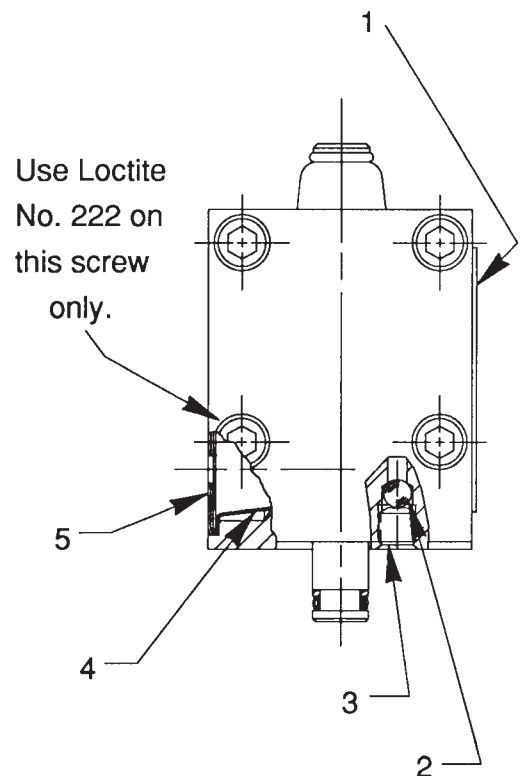


Parts List, Form No. 100766, Back sheet 1 of 1

Item No.	Part No.	No. Req'd	Description
1	216452	1	Trade Name Decal
2	12223	1	Metallic Ball (3/16 dia.)
3	10136	1	Hex Soc. Set Screw (1/4-20 UNC x 1/4 Lg.)
4	214792	1	Rubber Diaphragm
5	214793	1	Expansion Spring
6	206318	1	Shim
7	214790	1	Piston Plunger
8	*10266	3	O-ring (3/8 X 1/4 X 1/16, -010)
9	*12184	2	Backup Washer (3/8 X 1/4 X .04 Thk., -010)
10	215261	1	Bushing
11	309871	1	Piston Retainer
12	308913	1	End Cap
13	*10267	1	O-ring (7/16 X 5/16 X 1/16, -011)
14	10016	4	Soc. Hd. Cap Screw (1/4-20 X 1" Lg.; Torque to 115/125 in. lbs.)
15	*10658	1	O-ring (1" X 13/16 X 3/32, -117)
16	*19131	1	Backup Washer (1" X 13/16 X 3/32, -117)
17	*10914	1	O-ring (1-3/8 X 1-3/16 X 3/32, -123)
18	16346	1	Compression Spring (.99 O.D. X.89 Lg.)
19	206439	1	Compression Spring (1/8 O.D. x 5/16 Lg.)
20	308480	1	Support Plunger
21	*214796	1	Boot Diaphragm
22	214794	1	Boot Ring
23	214795	1	Spacer
24	47986	1	Work Support Body
25	10850	1	Retaining Ring
26	214824	1	Compression Spring (7/16 O.D. X 13/16 Lg.)
27	*205644	1	Expansion Plug (Must fit flush or below surface. Seal in place with Loctite gasket eliminator No. 510 or equivalent.)

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300519.

INSTALLATION INSTRUCTIONS

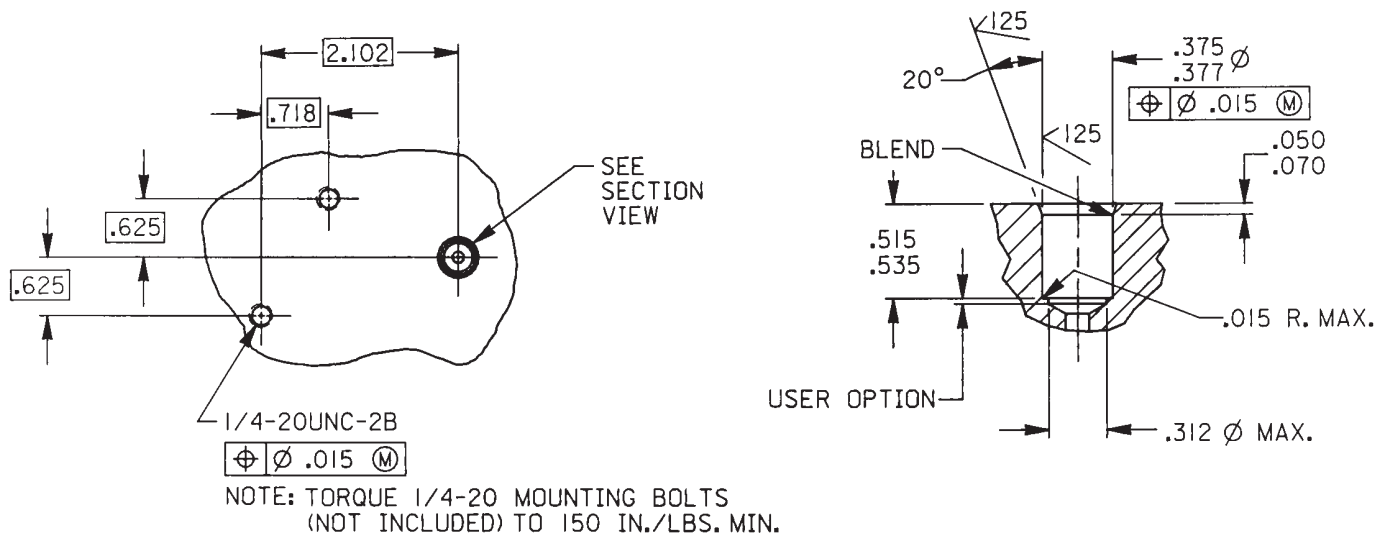

Refer to any operating instructions included with this product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Hytec replacement parts!**

Additional questions can be directed to our Technical Services Department.