


MODEL F
AIR/HYDRAULIC PUMP
GENERAL SECTION

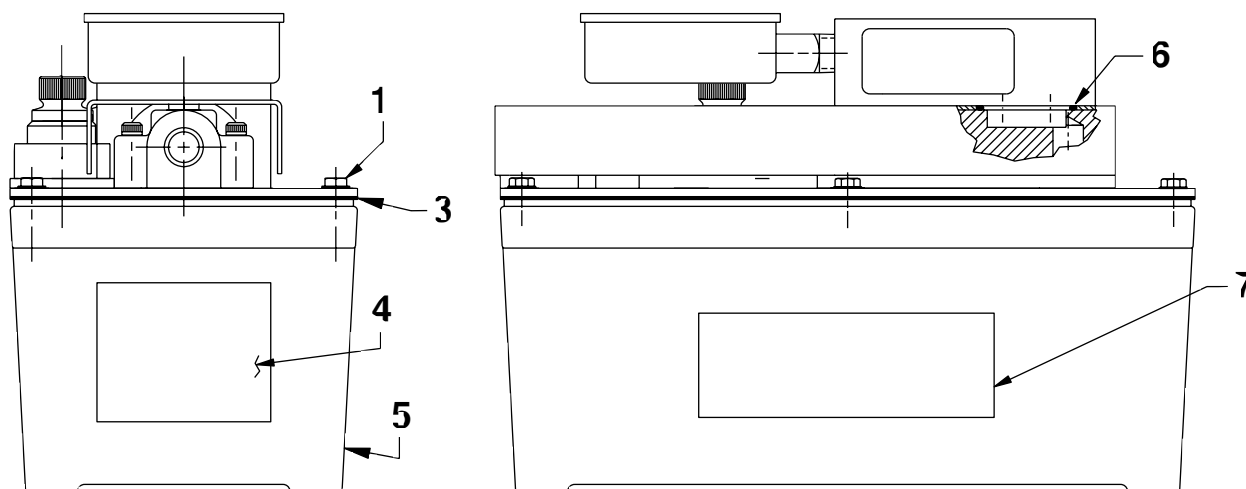


Item No.	Part No.	No. Req'd	Description
1	211060	6	Hex Hd. Washer Screw (9-15 X 1" Lg.; Torque to 25/35 in. lbs.)
3	*33853	1	Reservoir Gasket (Note: Trim to allow part no. 351214 to pass through freely.)
4	305494	1	Instruction Decal
5	61243	1	Reservoir
6	16684	1	O-ring (1-3/16" X 1" X 3/32)
7	211533	2	Trade Name Decal (Hytec)

PARTS INCLUDED BUT NOT SHOWN

211060	4	Hex Hd. Washer Screw (9-15 X 1" Lg.; Torque to 25/35 in. lbs.; For pump mounting purposes only.)
--------	---	---

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300951.

TOP & END VIEW

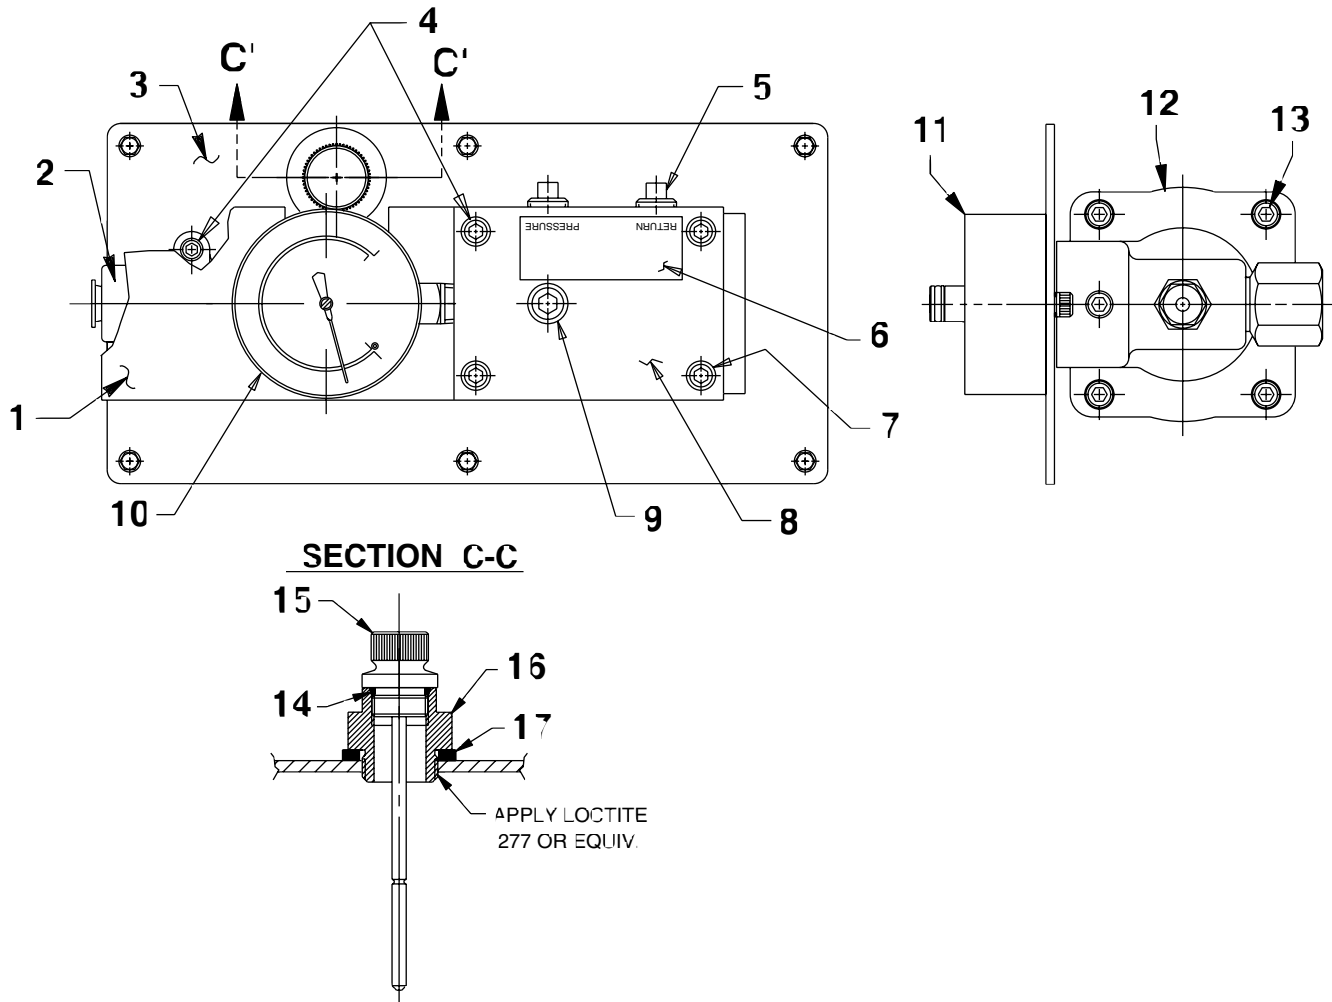


Item No.	Part No.	No. Req'd	Description
1	351219BK2	1	Shroud
2	309246	1	Intake Manifold
3	421240BK2	1	Cover Plate
4	11151	6	Soc. Hd. Screw (10-24 X 1-1/4" Lg.; Torque to 50/60 in. lbs.)
5	10970	2	Plug Fitting (1/4 NPTF)
6	210995	1	Trade Name Decal (Power Team)
7	10020	4	Soc. Hd. Screw (1/4-20 X 1-1/4" Lg.)
8	45837	1	Manifold
9	10479	1	Plug Fitting (1/4 NPTF)
10	17946	1	Gauge (0-6000 PSI; 2-1/2" Dia.)

Item No.	Part No.	No. Req'd	Description
11	58714	1	Manifold
12	64767	1	Pump Body
13	17428	4	Soc. Hd. Screw (1/4-20 X 1/2 Lg.; Torque to 85/95/in. lbs. oiled; Note: Cross torque in increments of 30 in. lbs.)
14	*10273	1	O-ring (13/16 X 5/8 X 3/32)
15	252076	1	Dip Stick
16	351214	1	Filler Plug Adapter
17	252041	1	Seal Washer

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300951.

BASIC PUMP ASSEMBLY

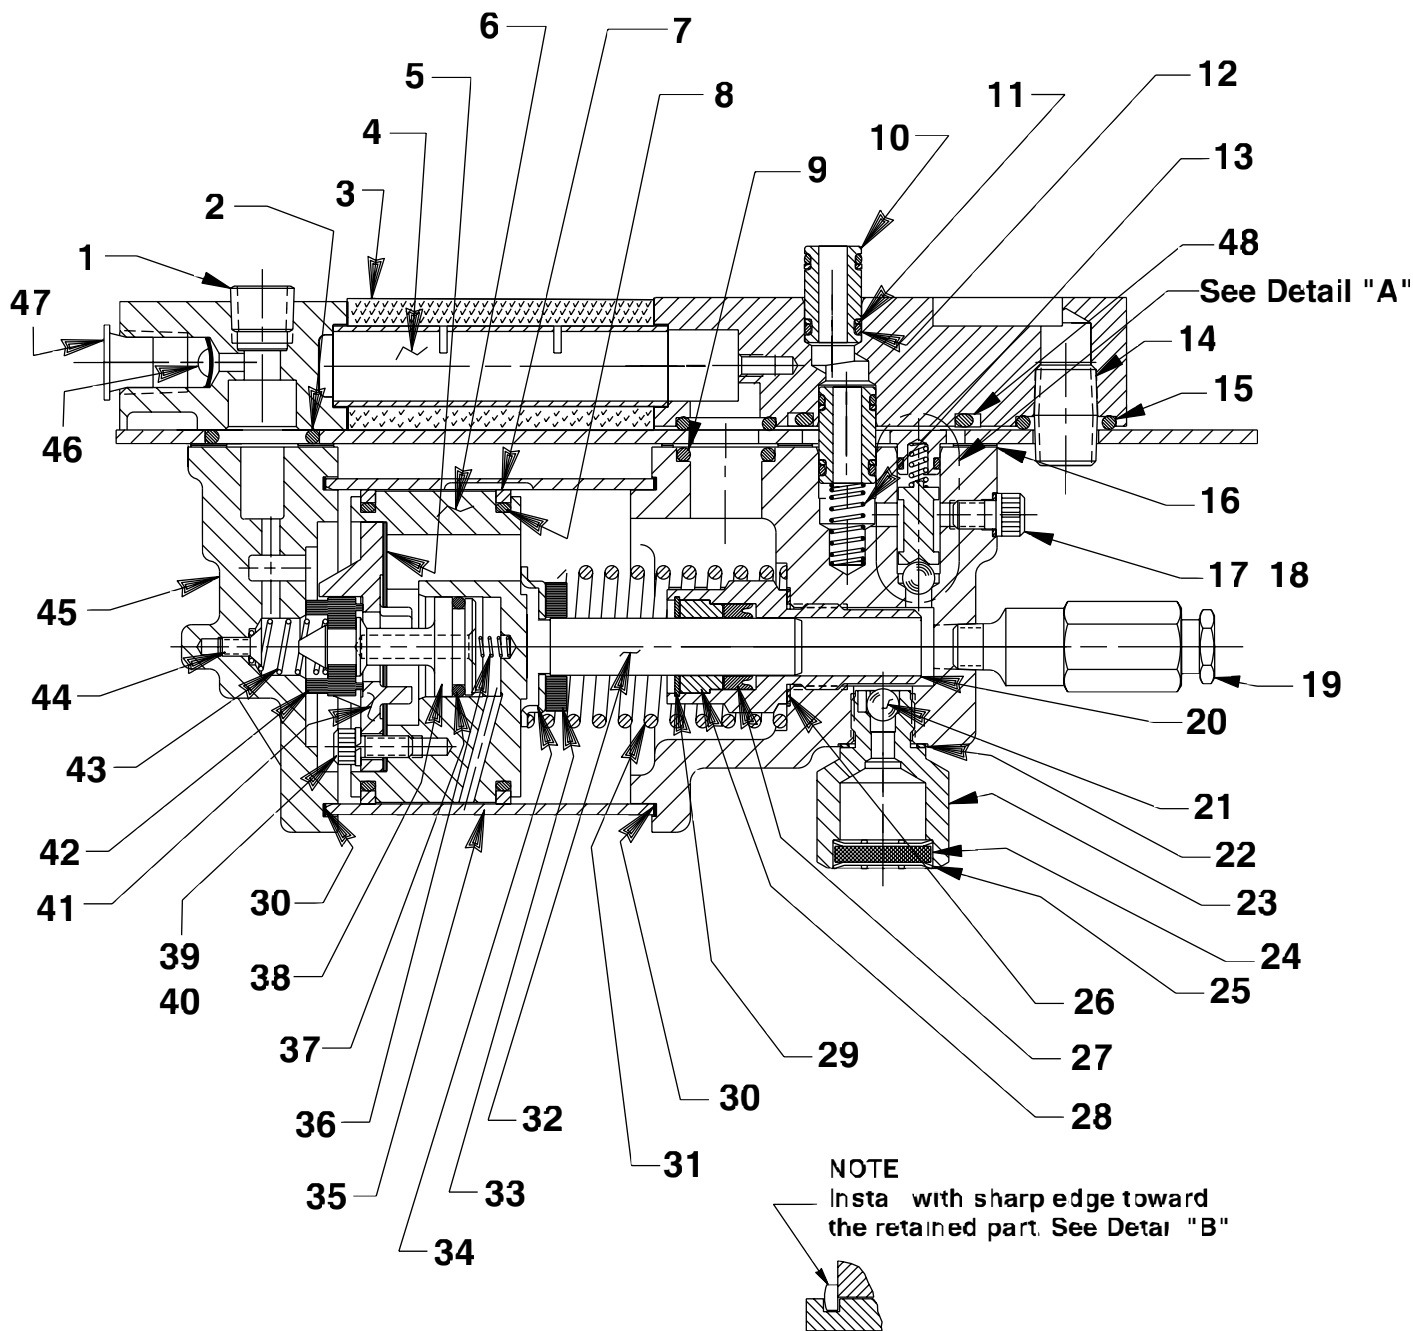

DETAIL "B"

Refer to any operating instructions included with this product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Power Team replacement parts!**

Additional questions can be directed to our Technical Services Department.


Parts List, Form No. 101852, Back sheet 2 of 2

Item No.	Part No.	No. Req'd	Description
1	14972	1	Plug Fitting (1/4 PTF)
2	*251717	1	O-ring (1" X 5/8 X 3/16)
3	*29992	1	Foam Tube
4	28387	1	Muffler
5	*28239	1	Gasket
6	52390	1	Piston Body
7	*14265	2	Piston Ring
8	*251835	2	O-ring (2-1/2" X 2-5/16" X 3/32)
9	*10272	1	O-ring (3/4 X 9/16 X3/32)
10	21094	2	Bushing
11	11863	4	Backup Washer (1/2 X 3/8 X 1/16)
12	10268	4	O-ring (1/2 X 3/8 X 1/16)
13	16448	1	Spring (5/16 O.D. X 13/16 Lg.)
14	15024	1	Straight Fitting (1/4 NPTF)
15	*10276	2	O-ring (1" X 3/4 X 1/8)
16	*351021	1	Cover Plate Gasket
17	*10442	1	Copper Washer (3/8 X 1/4 X 1/32)
18	10002	1	Soc. Hd. Screw (1/4-20 X 3/8 Lg.; Torque to 90/100 in. lbs.)
19	21278-48	1	Relief Valve (Set at 4,900 to 5,300; Apply loctite 592 [Power Team #905516] or equiv. & torque to 150/170 in. lbs.)
20	420043	1	Blank Cylinder (Torque to 90/100 ft. lbs.)
21	*10423	1	Ball (9/32" Dia.)
22	*10261	1	Copper Washer (3/4 X 19/32 X 1/32)
23	48010	1	Filter Adapter (Torque to 40/50 ft. lbs.)
24	214578	1	Filter

Item No.	Part No.	No. Req'd	Description
25	214586	1	Internal Retaining Ring
26	*10263	1	Special Washer (1" X .765 X 1/32)
27	*250204	1	U-cup
28	250207	1	Retainer
29	250208	1	Internal Retaining Ring (NOTE: Install with sharp edge toward the retained part; See Detail B)
30	*17429	2	Backup Washer (2-15/16" X 2-3/4" X .045)
31	*13938	1	Spring (1.452 O.D. X 4-7/16" Lg.)
32	350071	1	Piston (1/2 in.)
33	250205	1	Bumper
34	250206	1	Spring Guide
35	351122	1	Air Cylinder (NOTE: Locate groove on upper half (top) of pump with chamfered tube end towards rear as shown.)
36	*12692	1	Spring (3/16 O.D. X 1-11/16" Lg.)
37	*211052	1	O-ring (.900 X .706 X .097)
38	305475	1	Exhaust Valve Stem
39	*10241	3	Lockwasher (For #10 Bolt)
40	211054	3	Soc. Hd. Screw (10-24 X 1/2 Lg.; Torque to 50/55 in. lbs.)
41	33822	1	Piston End Plate Casting
42	*28183	1	Piston Poppet
43	205679	1	Spring (.485 O.D. X .915 Lg.)
44	*205674	1	Flat Hd. Screw (8-32 X 3/8 Lg.; Torque to 12/18 in. lbs.)
45	51480	1	Rear Head
46	*216296	1	Filter Disc
47	14794	1	Plastic Cap
48	*11841	1	O-ring (1.62 x 1.37 Nitrile)

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300951.

DETAIL "A"

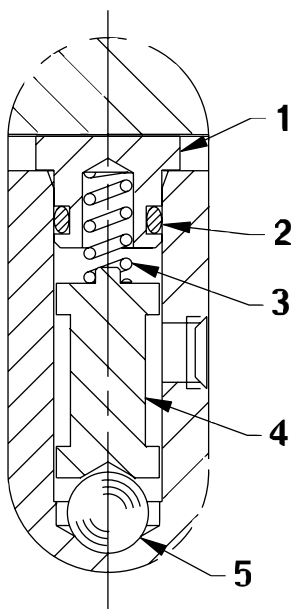

Item No.	Part No.	No. Req'd	Description
1	36497	1	Check Valve Retainer
2	*12522	1	O-ring (3/8 X 1/4 X 1/16; Urethane)
3	*10445	1	Spring (5/32 O.D. X 3/4 Lg.)
4	202568	1	Ball Guide
5	*10423	1	Ball (9/32" Dia.)

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300951.

Note: Shaded areas reflect last revision(s) made to this form.