

Hydraulic Technologies
5885 11th Street
Rockford, IL 61109-3699 USA

Tech. Services: (800) 477-8326
Fax: (800) 765-8326
Order Entry: (800) 541-1418
Fax: (800) 288-7031

Internet Address:
<http://www.powerteam.com>

Parts List for:

110194
110195
110196

**Double-acting (Upper Flange - Manifold Mount)
SWING / PULL CLAMP**

Max. Capacity: 1,200 lbs. Clamping Force (with 1-1/2" Ig. arm) at 5,000 PSI


110194 - Left Hand, 11/32" Stroke


110195 - Right Hand, 11/32" Stroke

110196 - Straight Pull, 11/32" Stroke

The piston rod U-cup seal (Item 4) can be easily twisted if installed incorrectly.

Before installing the piston rod (Item 2) lubricate the rod and all seals with hydraulic oil. Install the rod with light pressure and a twisting motion as the seal is first contacted.

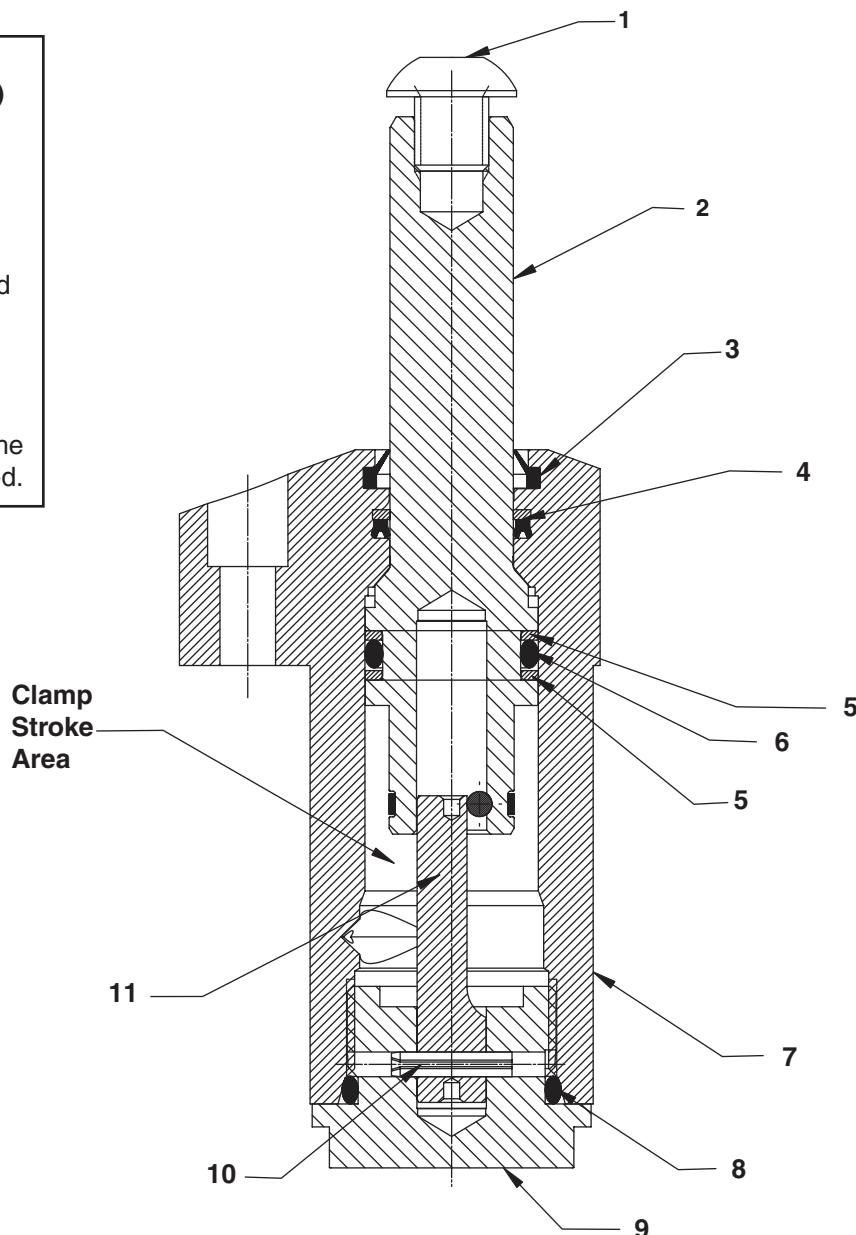
SECTION A-A

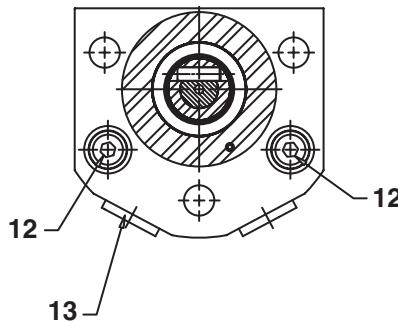

BOTTOM VIEW

Item No.	Part No.	No. Req'd	Description
1	251445	1	Screw, Button Hd. (3/8-16 x 3/8)
2	360156	1	Piston Rod
3	*260141	1	Rod Wiper
4	*260143	1	U-cup
5	*260137	2	Backup Washer (.87 x .70)
6	*260139	1	O-Ring (.87 x .68 Polyurethane)
7	66574	1	Body
8	12745	1	O-Ring (1.15 x .92 Nitrile)
9	360086	1	Cap, End
10	260144	1	Pin, Spring (.13 x .60)
11	360091	1	Rotating Cam (Left Hand† 90° for 110194)
	360092	1	Rotating Cam (Right Hand† 90° for 110195)
	360090	1	Rotating Cam (Straight Pull for 110196)
12	*253089	2	Fitting, Plug (5/16-24)
13	250883	2	Fitting, Plug (7/16 SAE)

NOTE: Flat of cam (clamp stroke area) to be opposite of body port.
Grease roller in piston rod (Item #2) and cam with a light coating of CDM Extreme Pressure Lube #3.

PARTS INCLUDED BUT NOT SHOWN

251738	1	Plug w/filter
260145	2	O-Ring (.43 x .18 Nitrile)

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300611.

†Right hand rotation is clockwise rotation when viewed from the piston rod end. Left hand is counterclockwise rotation. To reverse clamp rotation, order the appropriate rotating cam.

Refer to any operating instructions included with this product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Hytec replacement parts!**

Additional questions can be directed to our Technical Services Department.